


- NOTES: 1. PRIOR TO APPLICATION OF SPlice ADHESIVE, THE EXISTING LAP SEAM IS TO BE PREPARED WITH MANUFACTURER'S RECOMMENDED CLEANING SOLUTION AND PROCEDURES. CONSULT MANUFACTURER FOR RECOMMENDED MEANS AND METHODS.
2. INSPECT THE EXISTING FIELD LAP SEAM FOR BONDING DEFICIENCIES. CLEAN AND REPAIR PRIOR TO COVER STRIP APPLICATION.
3. FOR TYPICAL LAP SEAM RESTORATION SEE DETAIL I/R 1

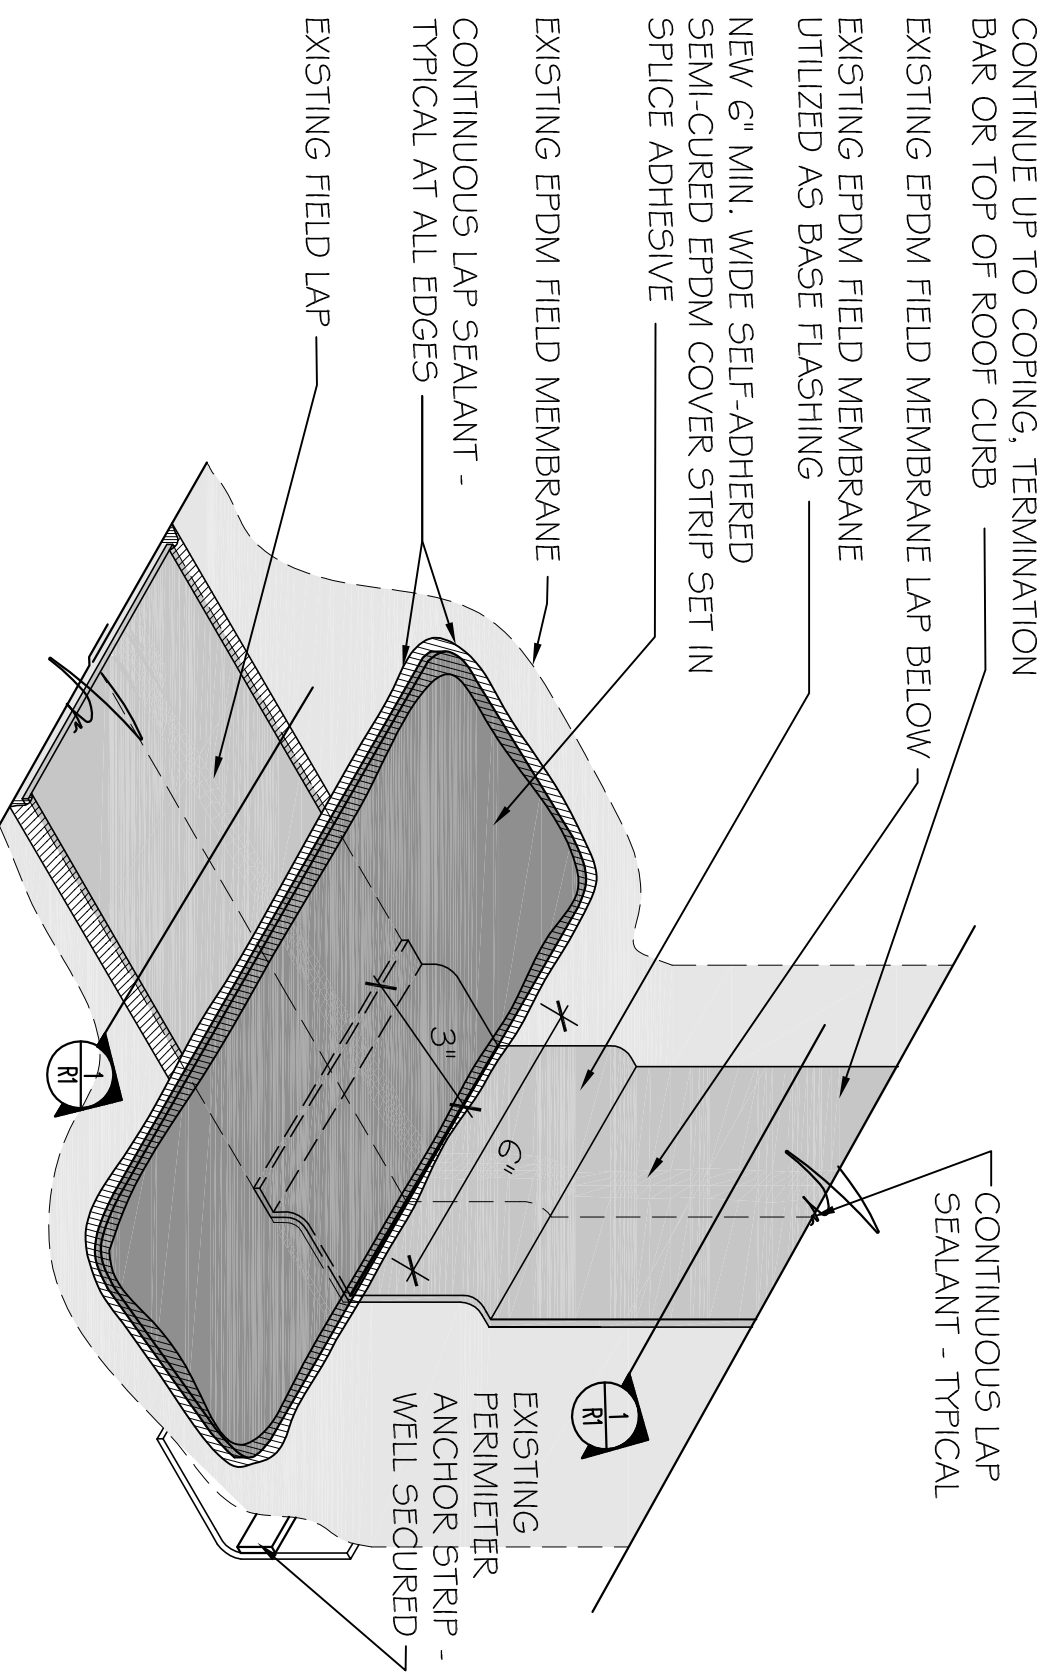

EXISTING EPDM SEAM RESTORATION DETAIL  
AT ANGLE CHANGE ALTERNATE REPAIR METHOD

1  
R5

EPDM ROOFING ASSOCIATION

3" = 1'-0"