



NOTE: 1. PRIOR TO CUTTING THE EXISTING BRIDGING MEMBRANE CLEAN WITH MANUFACTURERS RECOMMENDED CLEANING SOLUTION AND RINSE THOROUGHLY

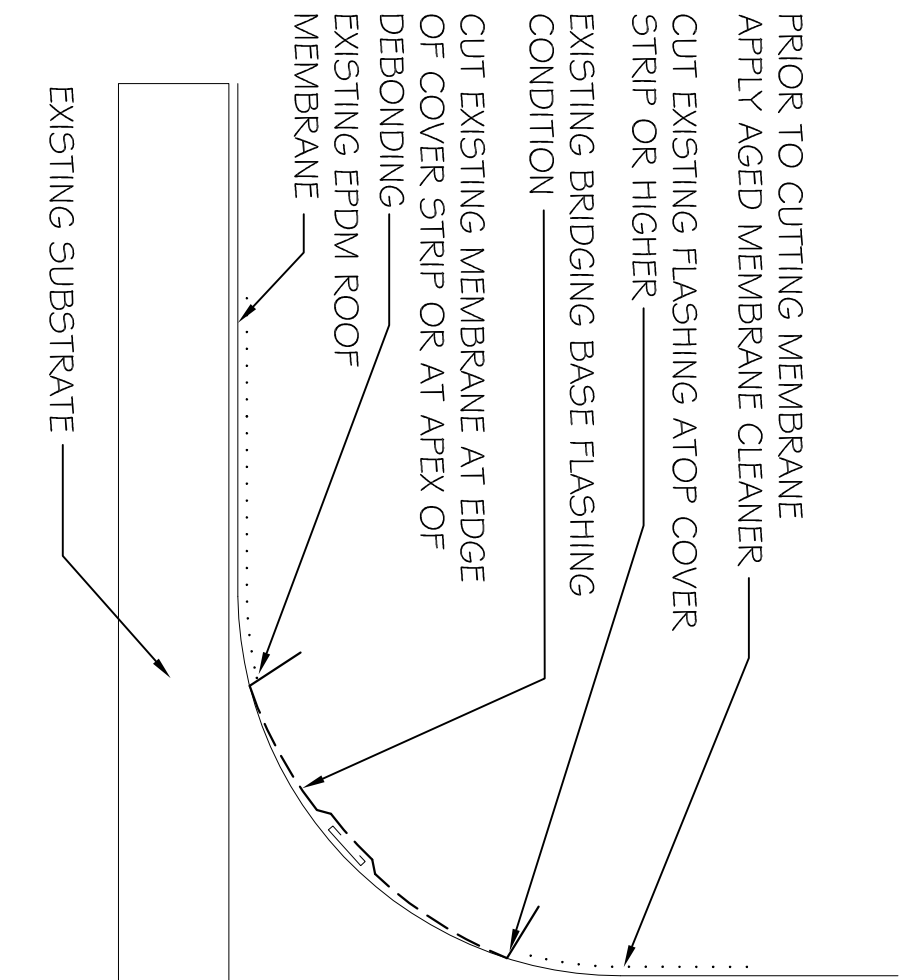


STEP 1. PREPARATION

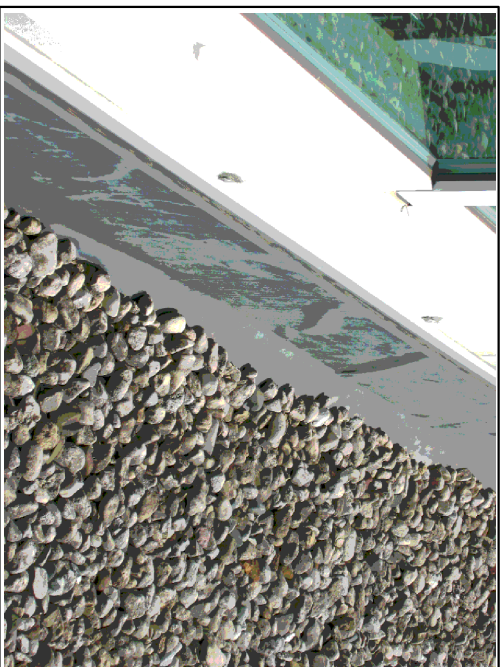

EXISTING BRIDGING CONDITION

EXISTING VERTICAL SUBSTRATE OR ROOF CURB

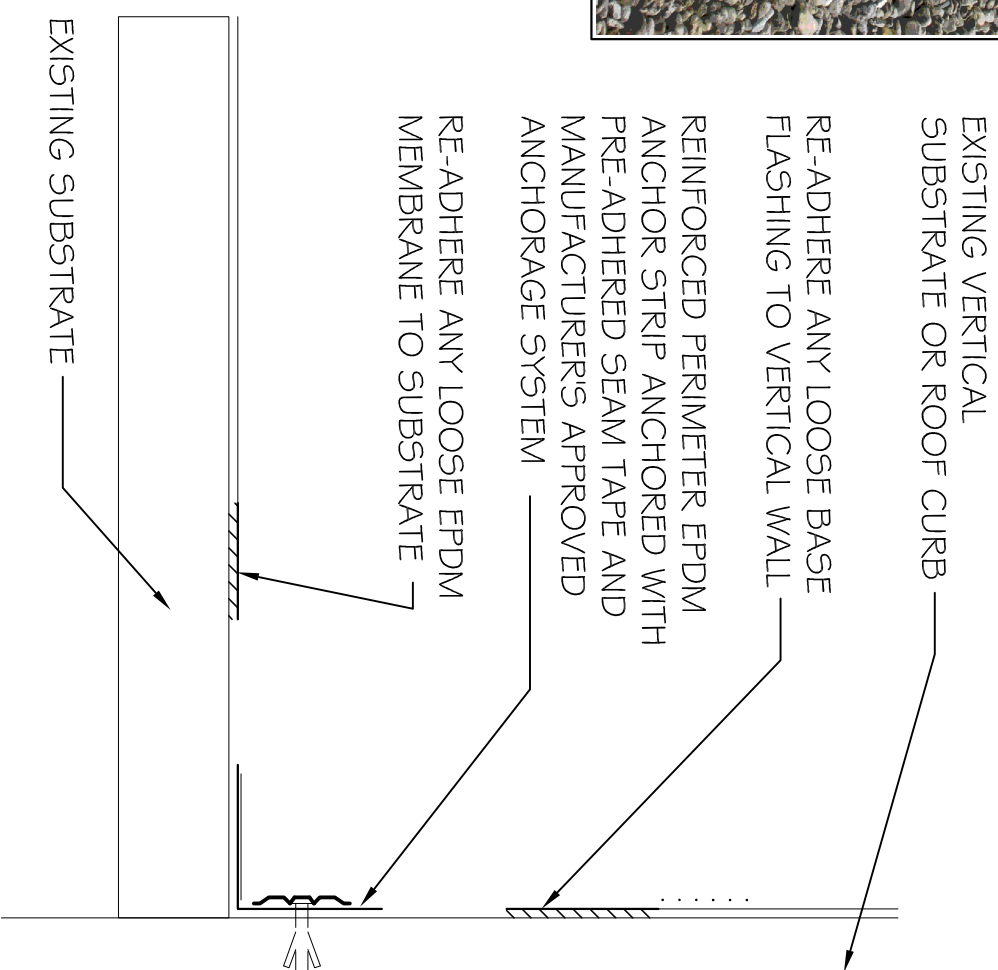


STEP 2. NEW PERIMETER SECUREMENT

1 BASE FLASHING RESTORATION - EXISTING BRIDGING CONDITIONS

R6

EPDM ROOFING ASSOCIATION

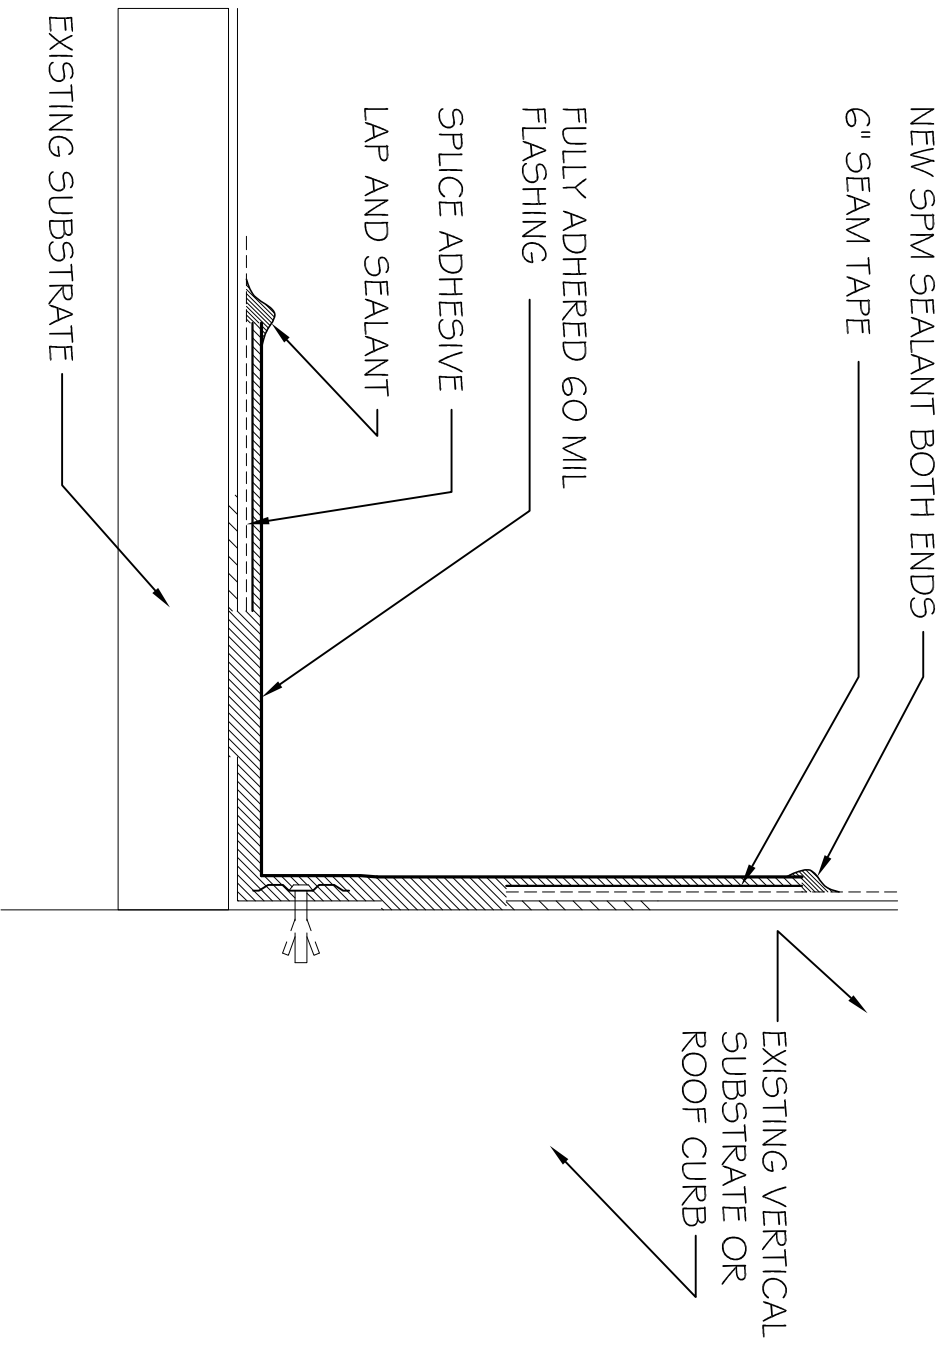

STEP 3. NEW FLASHING

- LEGEND
- CLEANER
 - SPlice ADHESIVE
 - ▲ LAP SEALANT

3" = 1'-0"